
















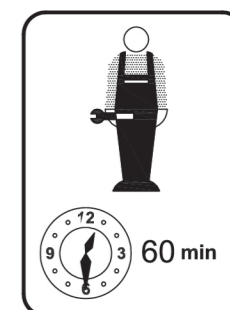


140x200cm Bed

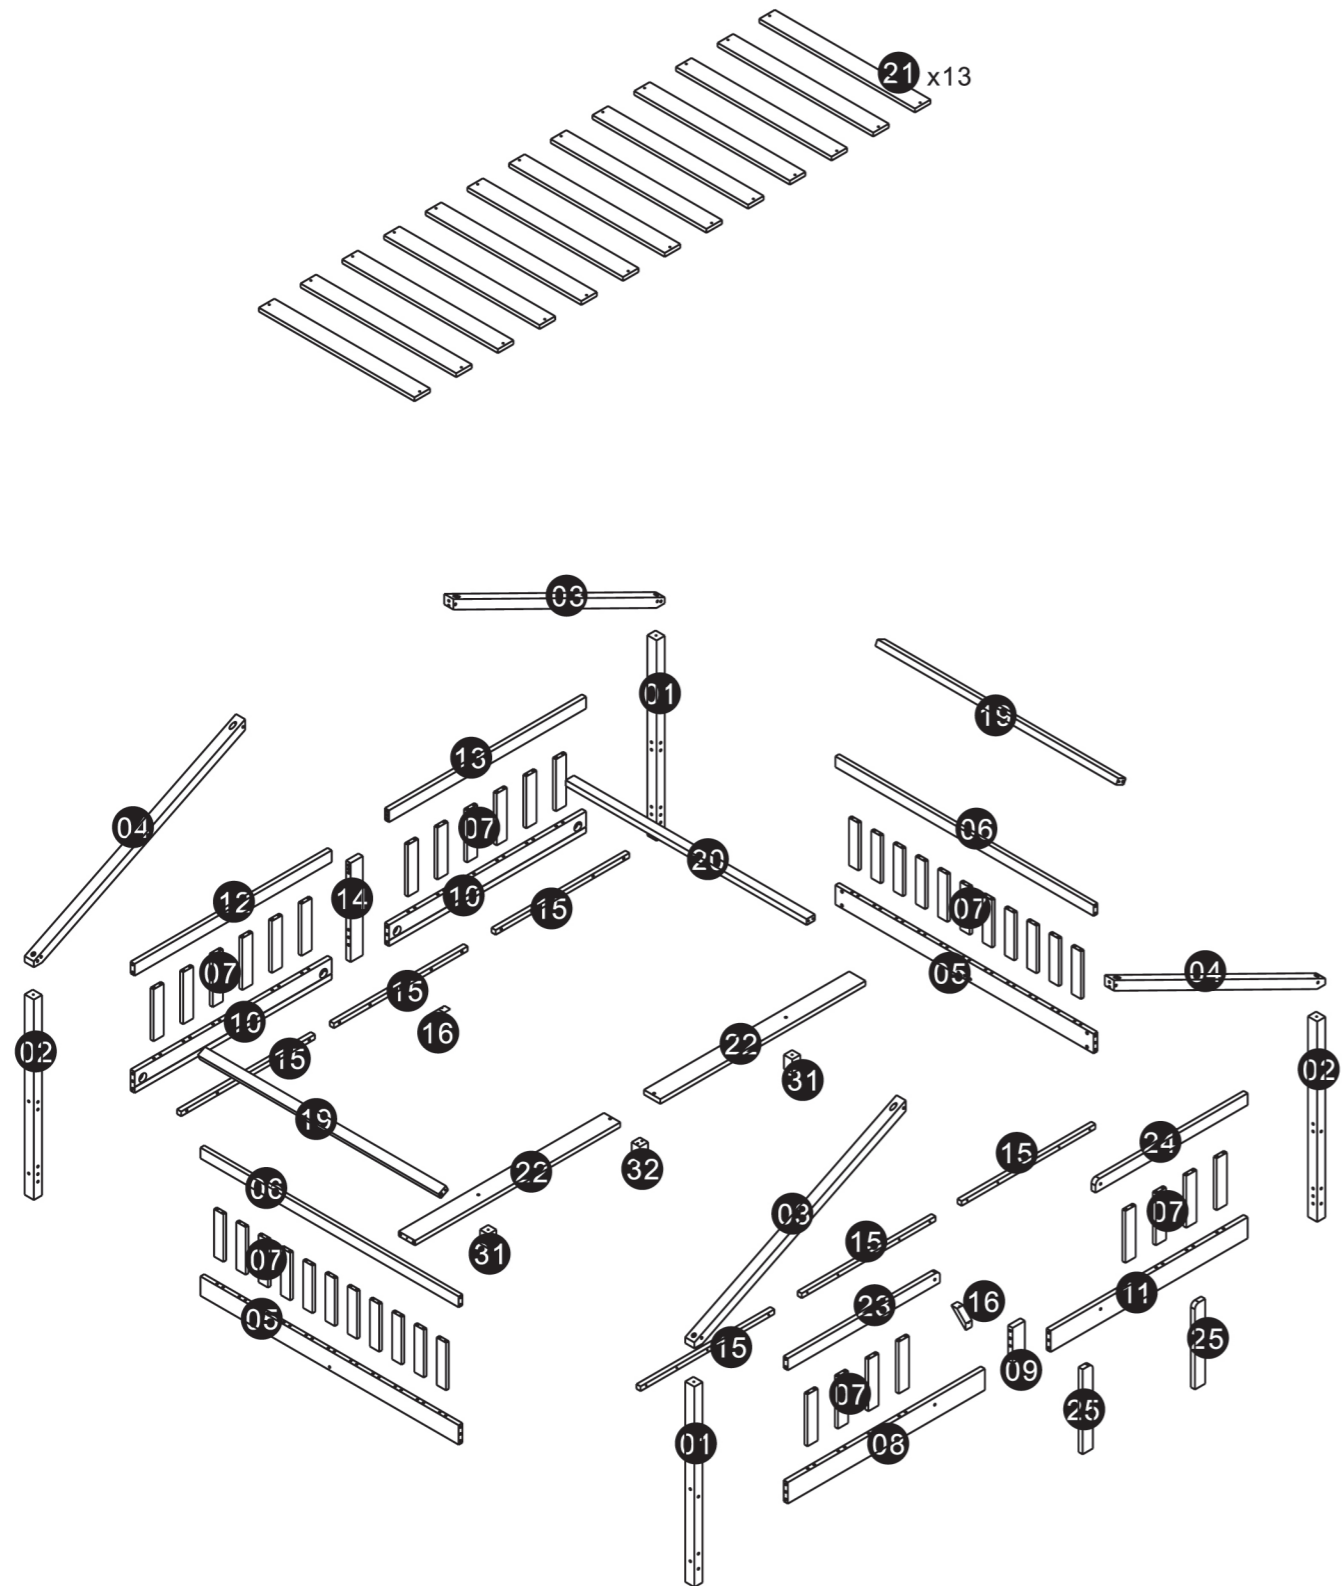


EXPLODED VIEW



HARDWARE

A x12  M6 x90mm	B x8 	C x16  Ø6 x90mm	D x210  Ø8 x30mm	E x3  M6 x140mm
F x10 	G x10 	H x10 	I x6  M6 x30mm	J x60  Ø4 x30mm
K x2 	L x2 	M x2 	N x4  Ø6 x80mm	O x2 
P x6  Ø7x50mm				


TOOLS




Ruler - Use this ruler to help correctly identify the screws



01

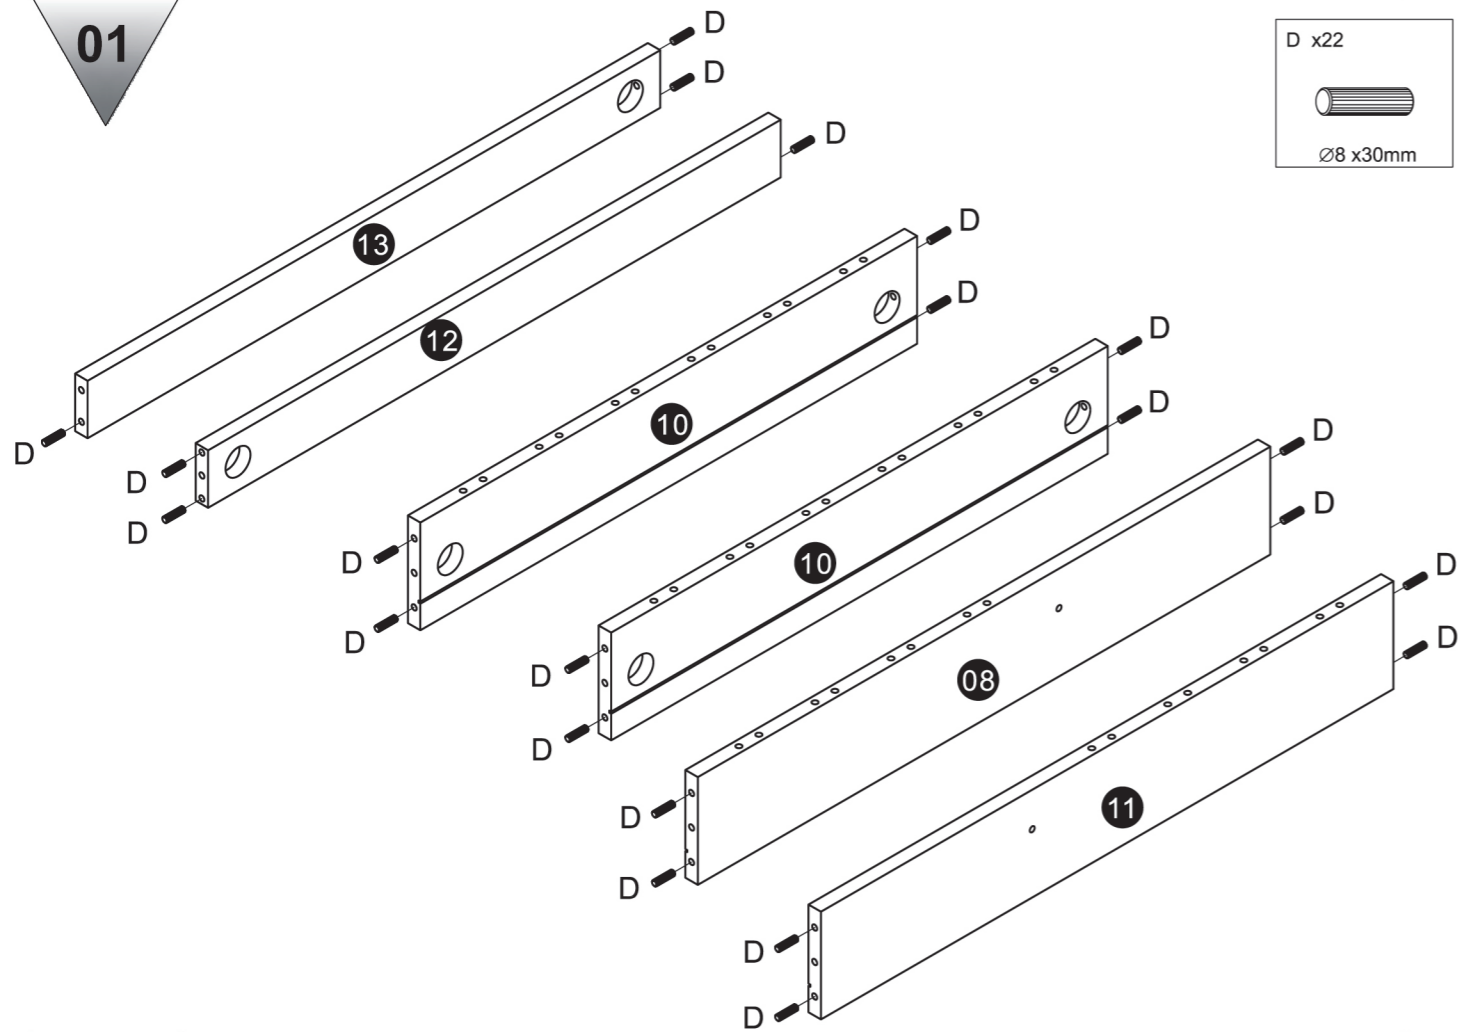


02

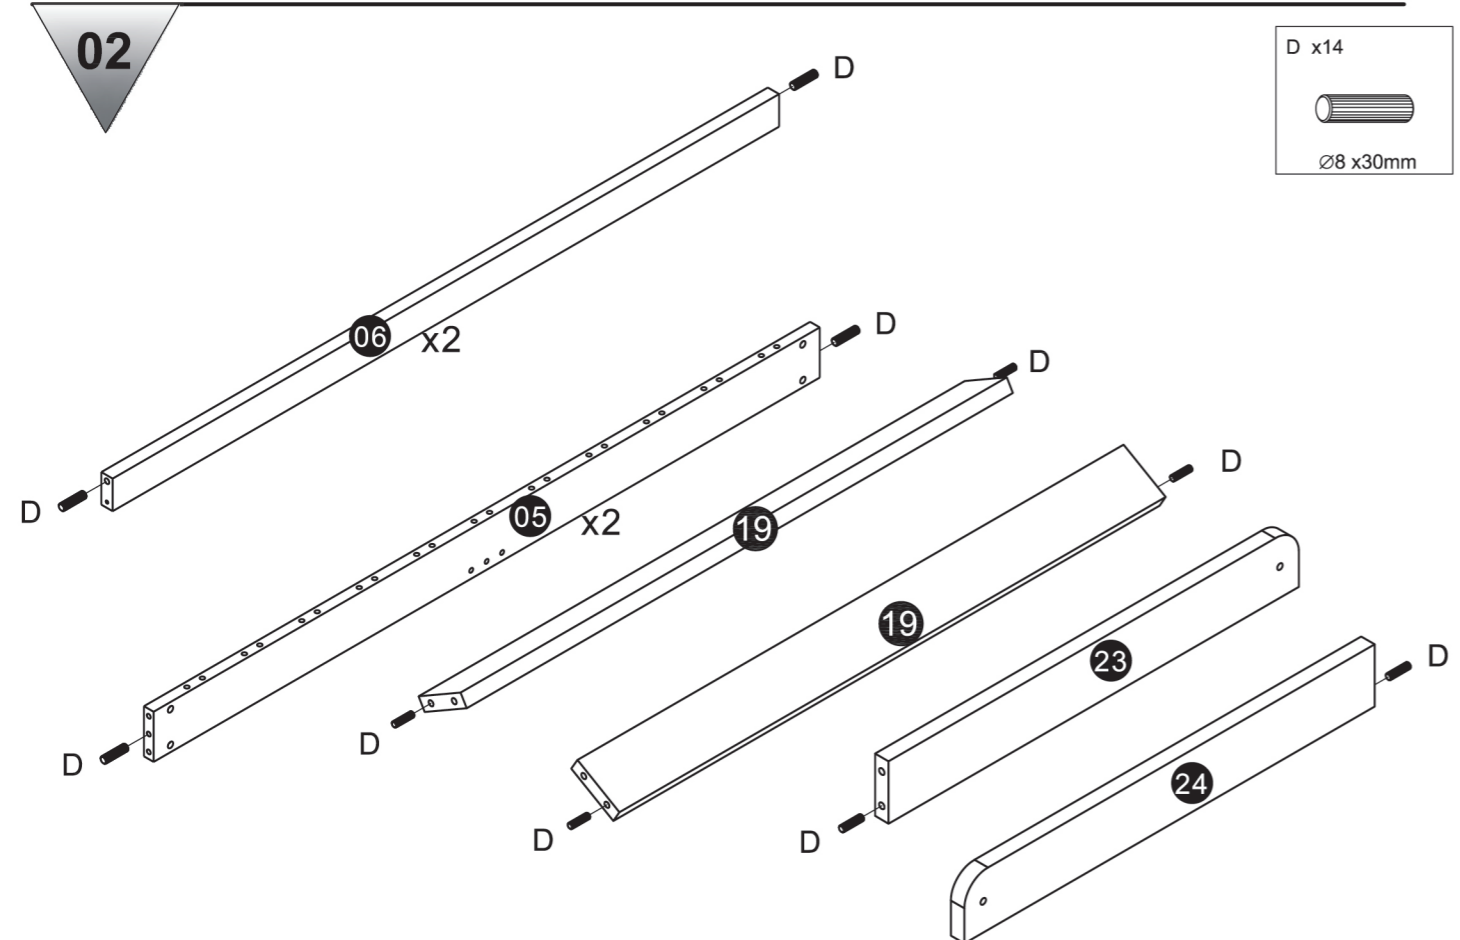




19

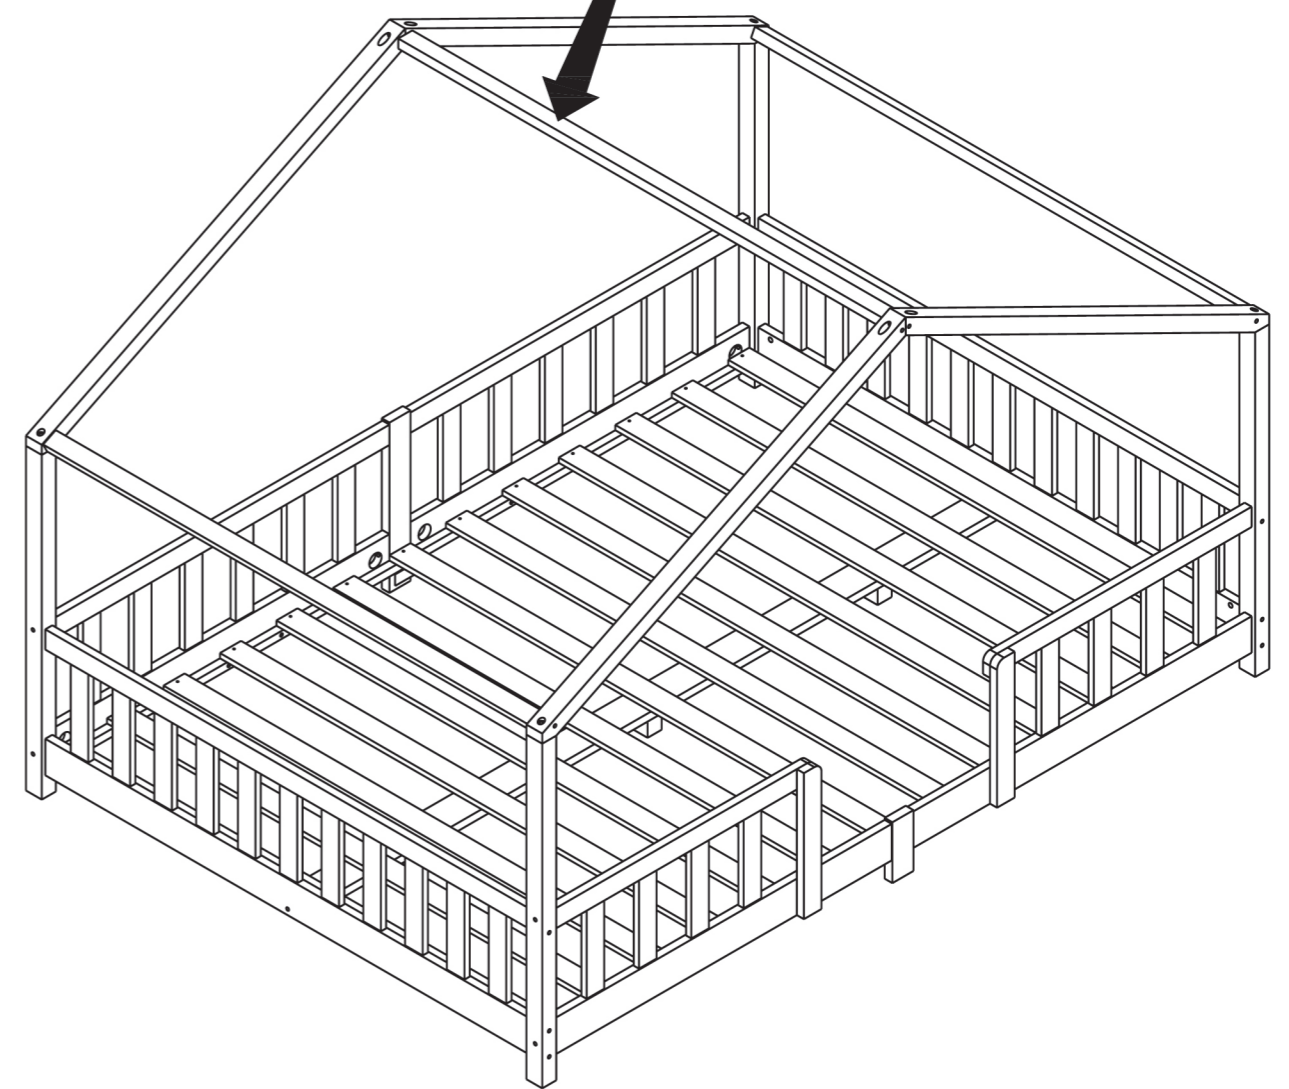NO HANGING



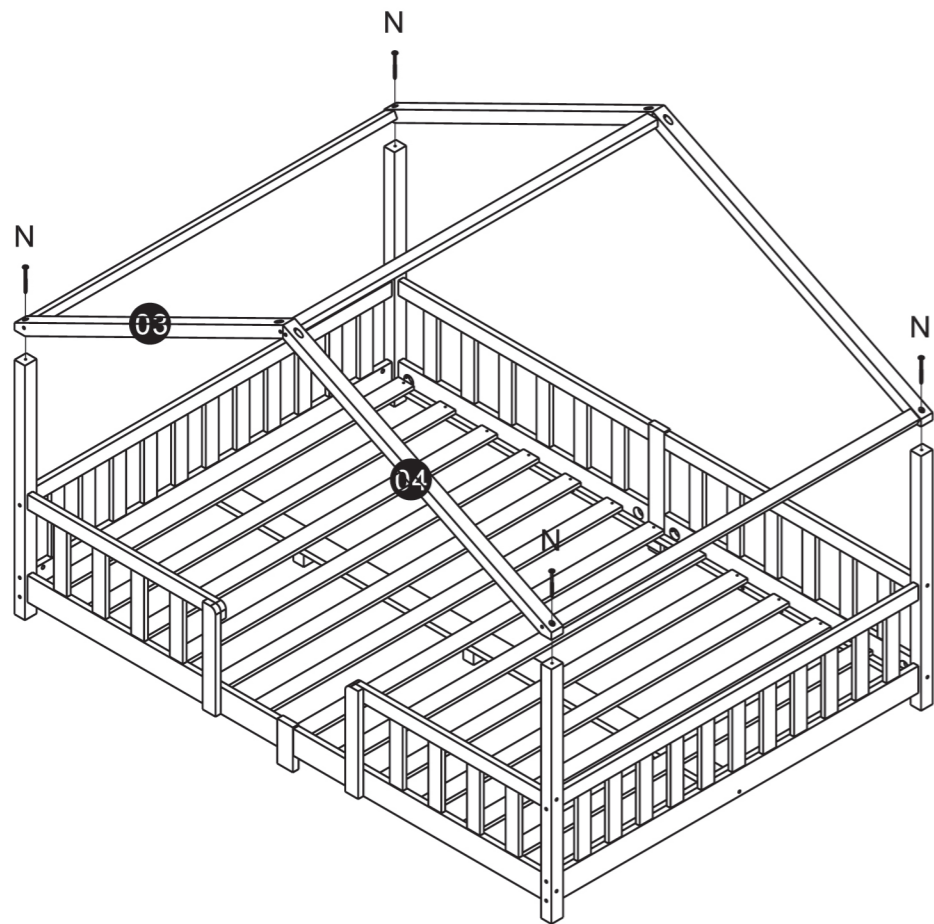



17





N x4

 Ø6 x80mm
 L x1

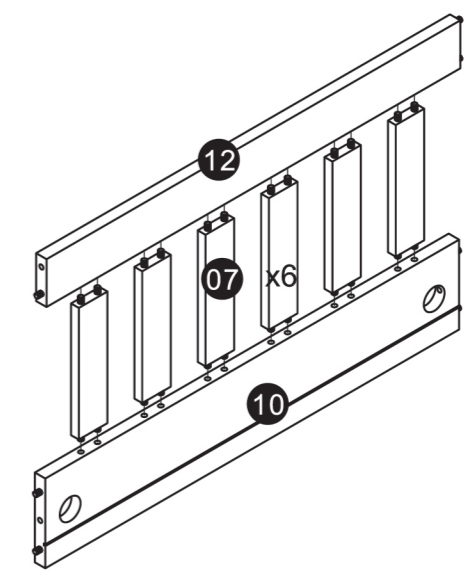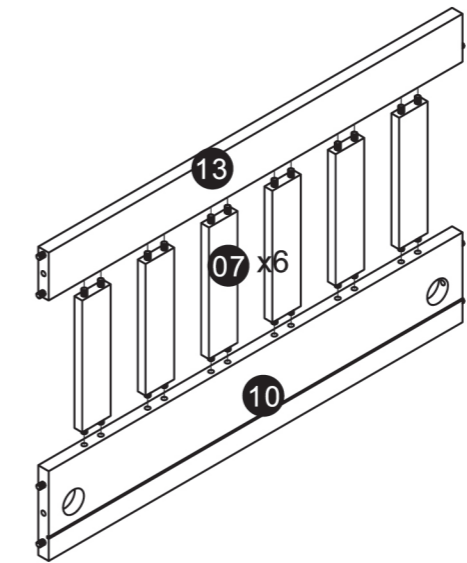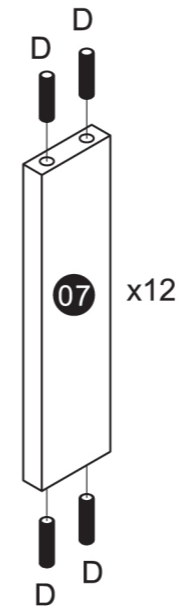

03

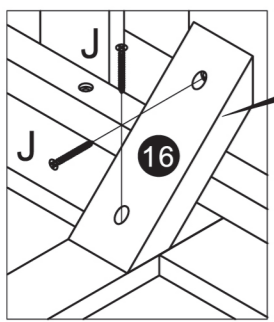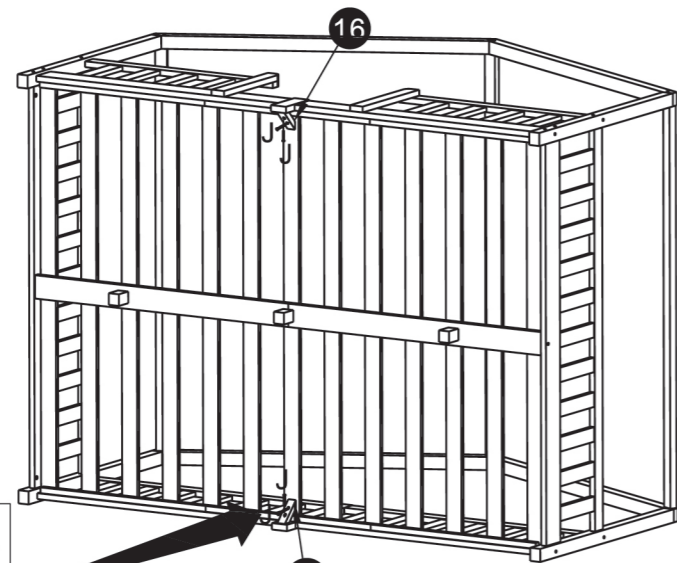

D x48

 Ø8 x30mm


18








J x4

 Ø4 x30mm

04

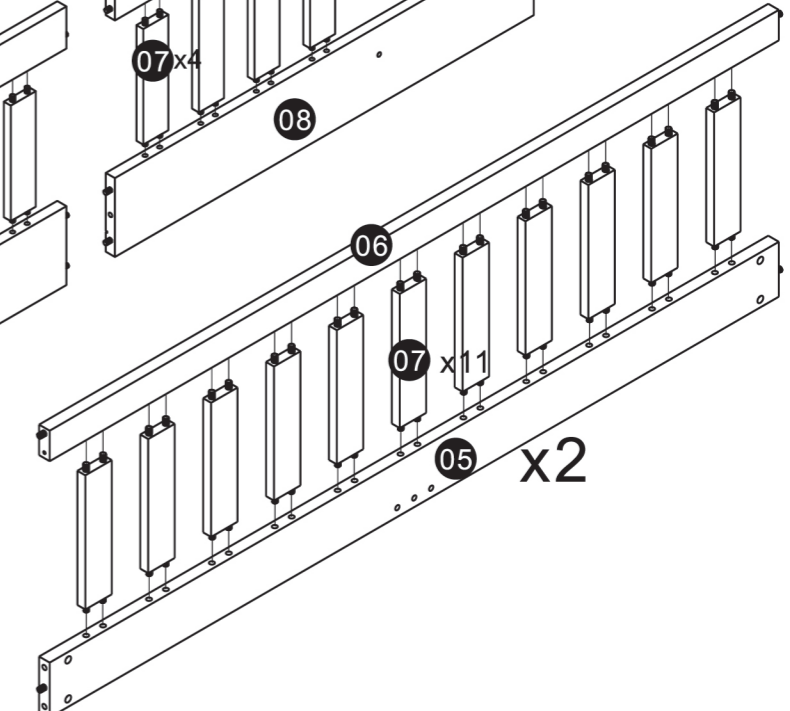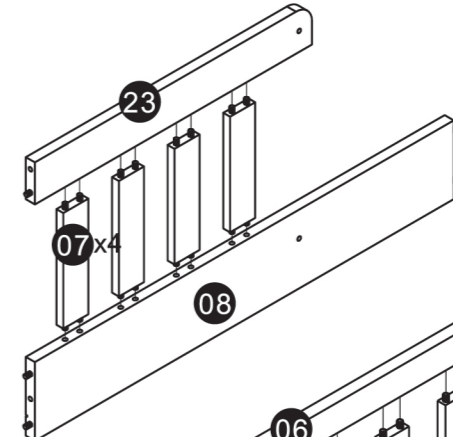
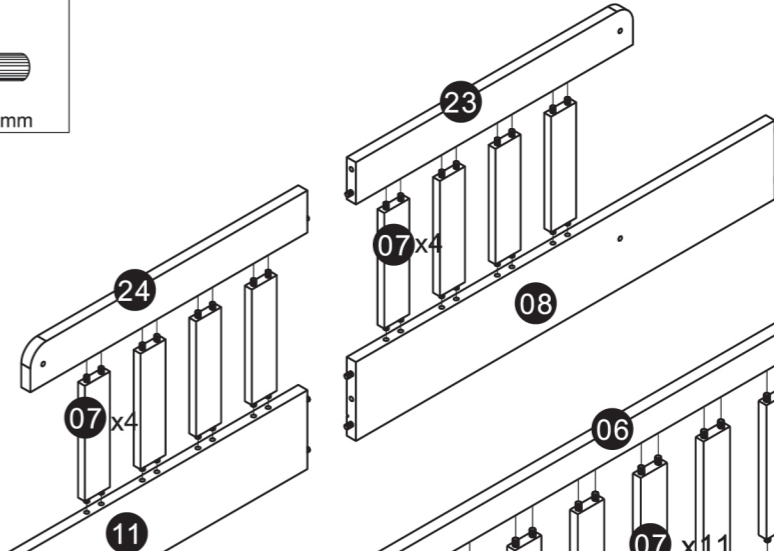


D x120

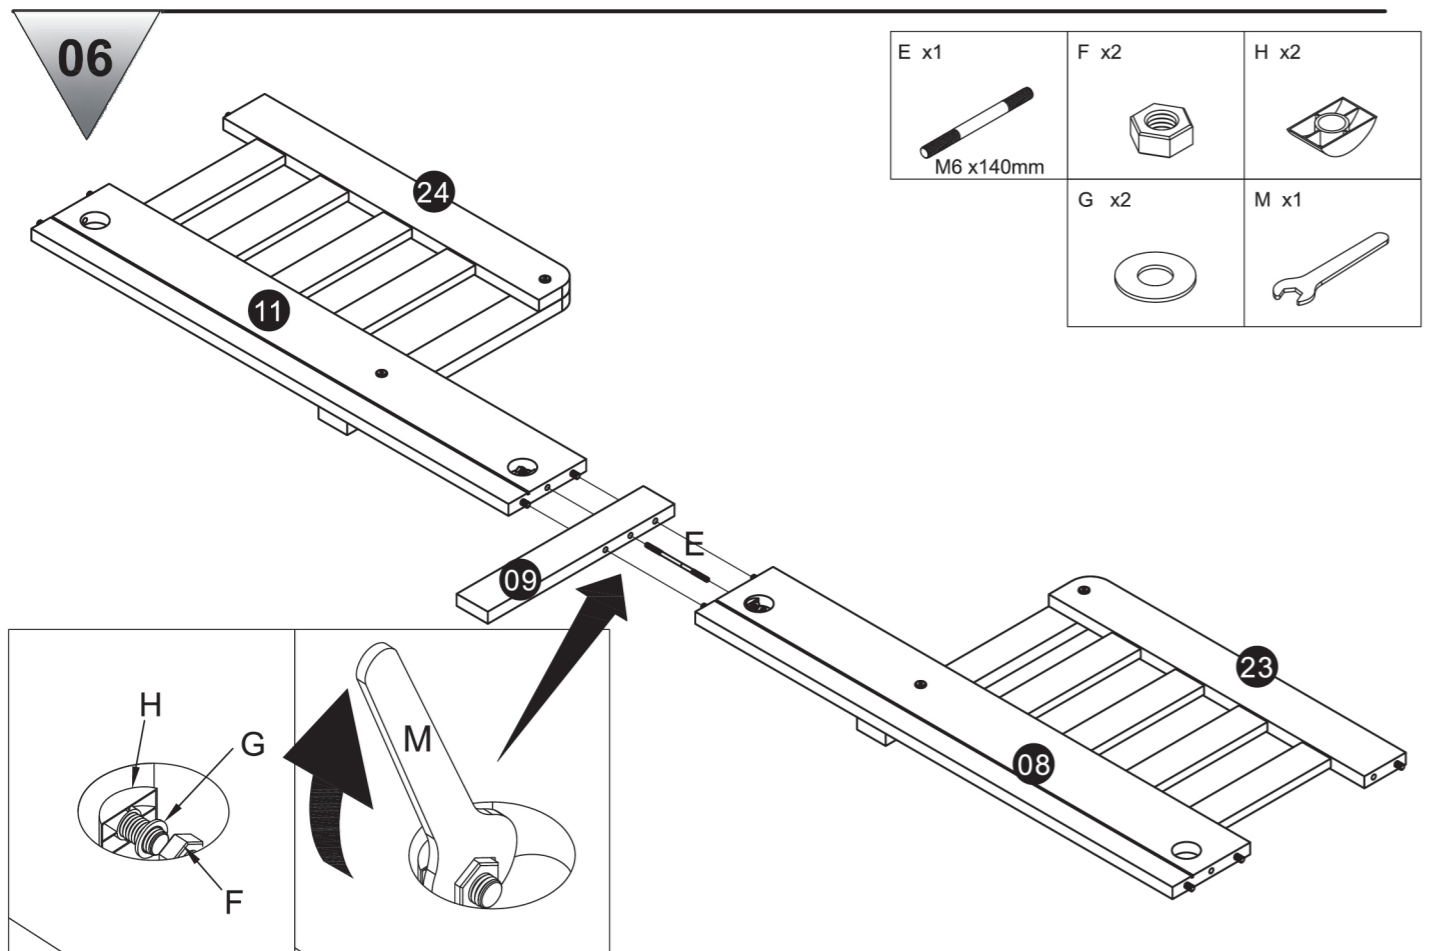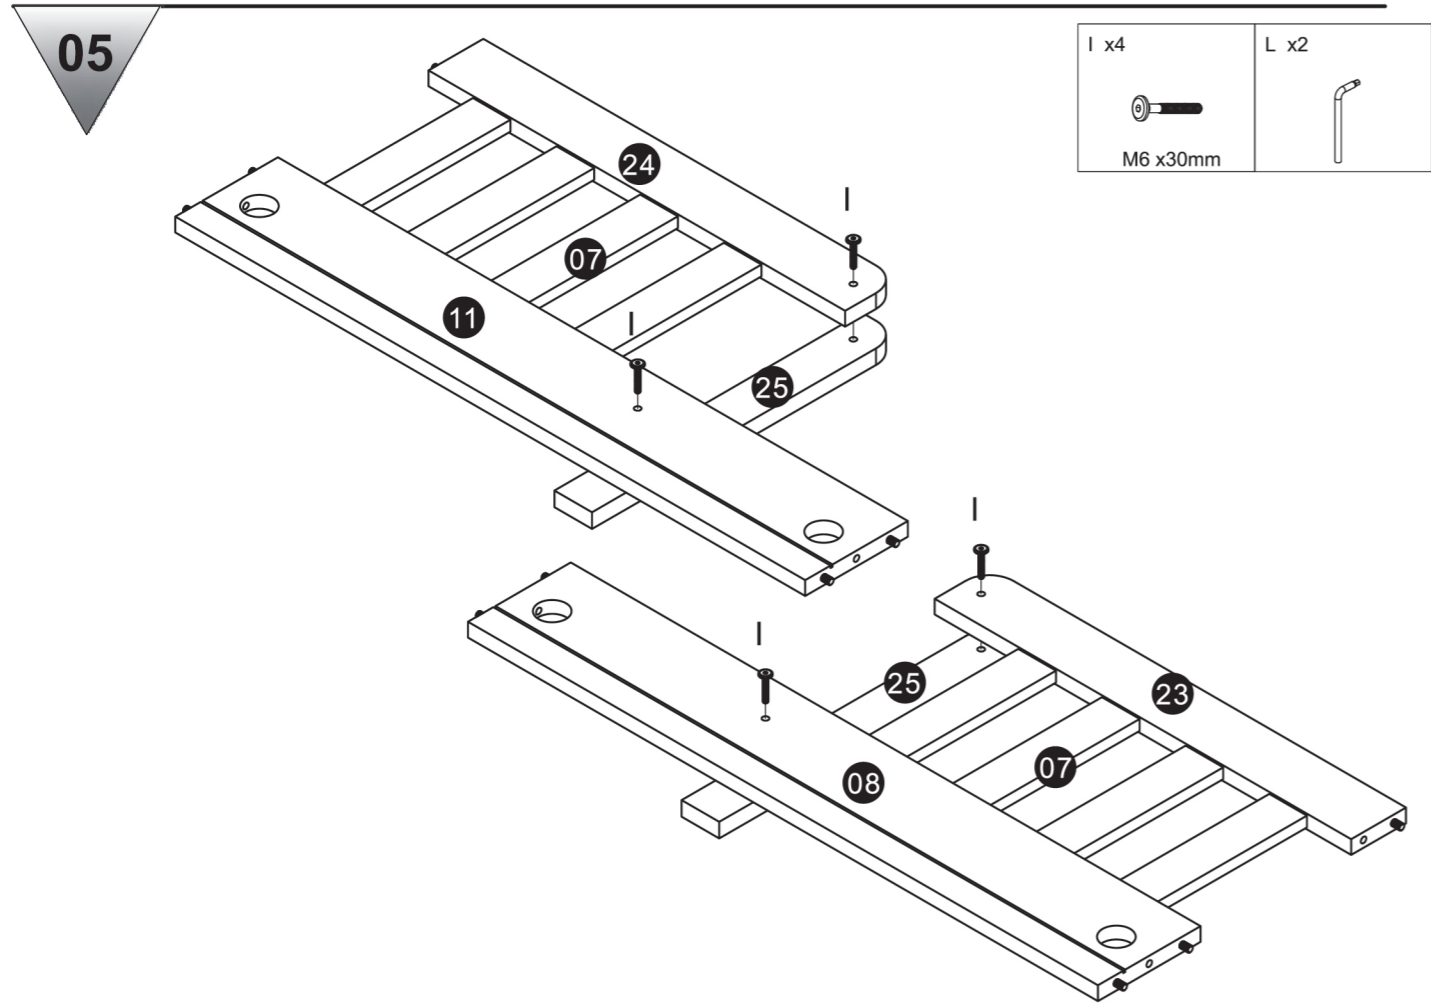 Ø8 x30mm









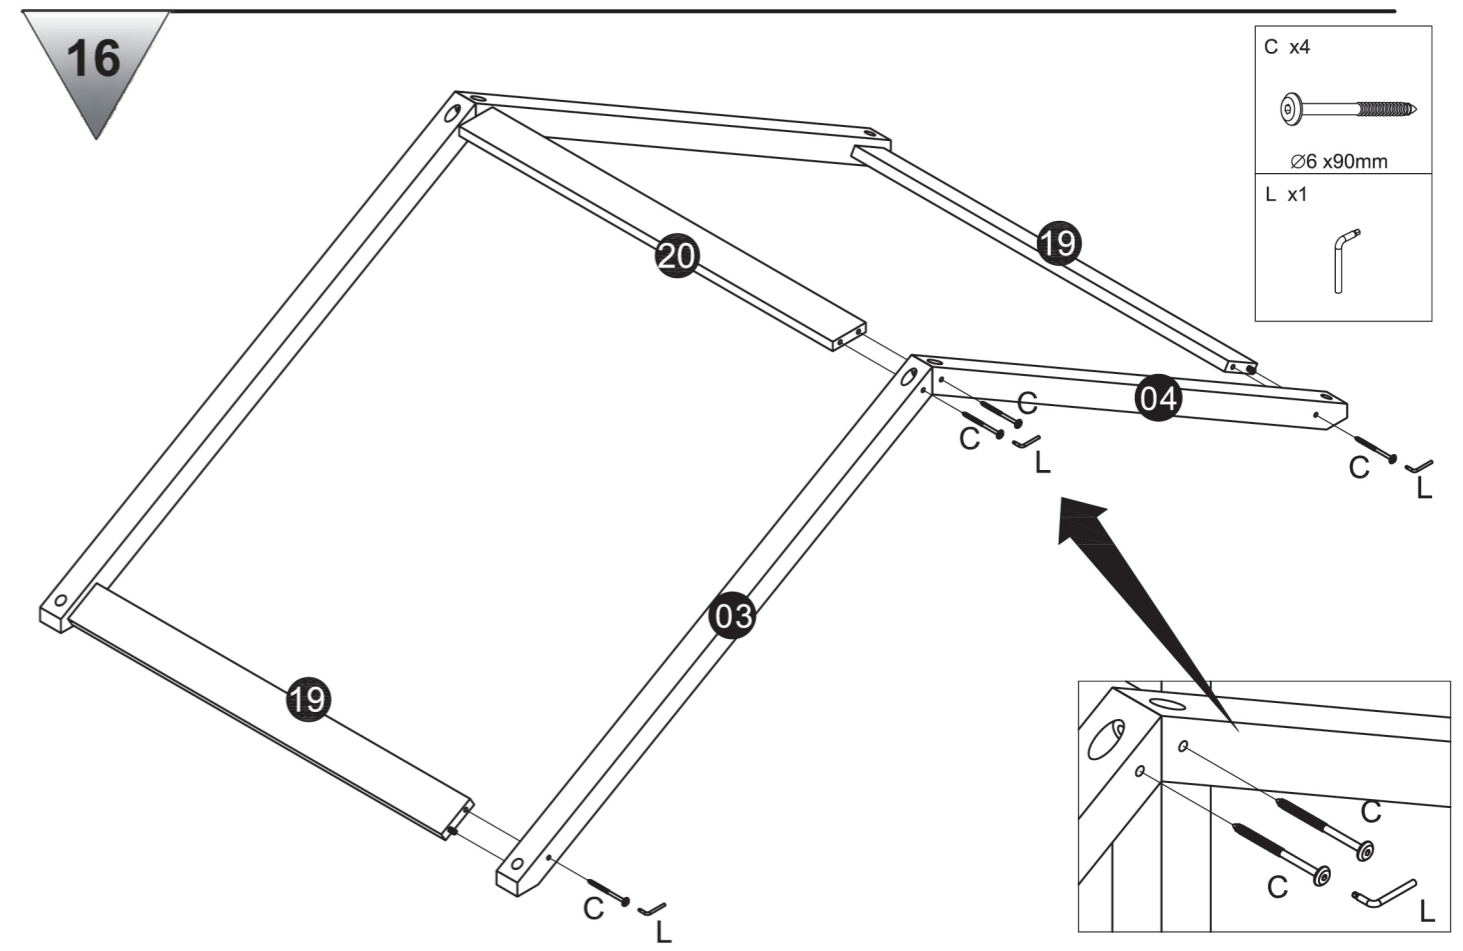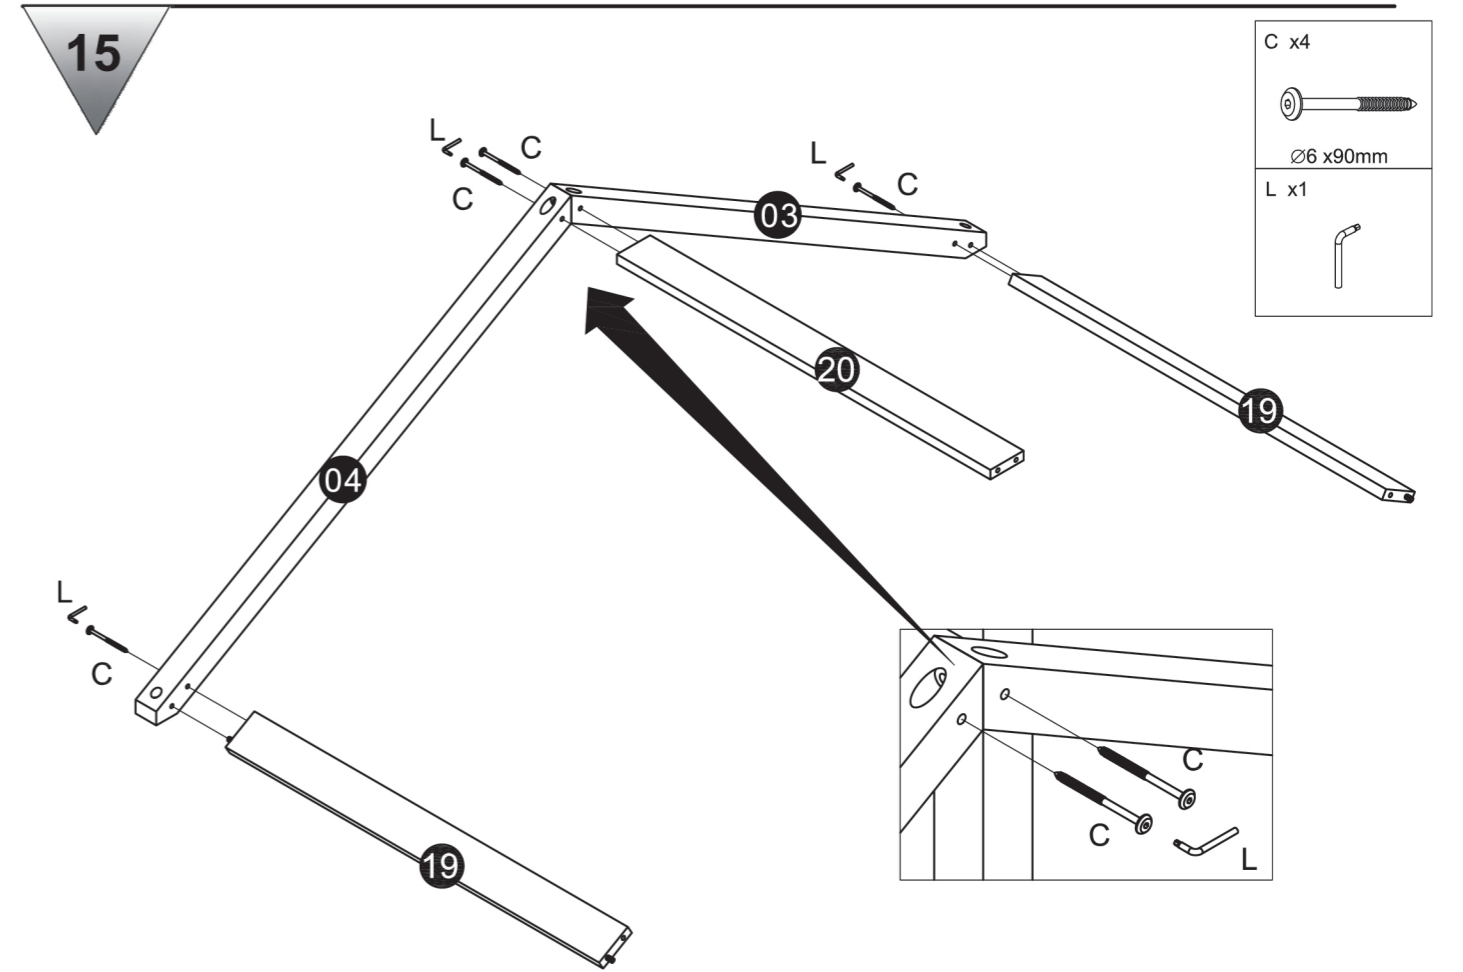



P.:06

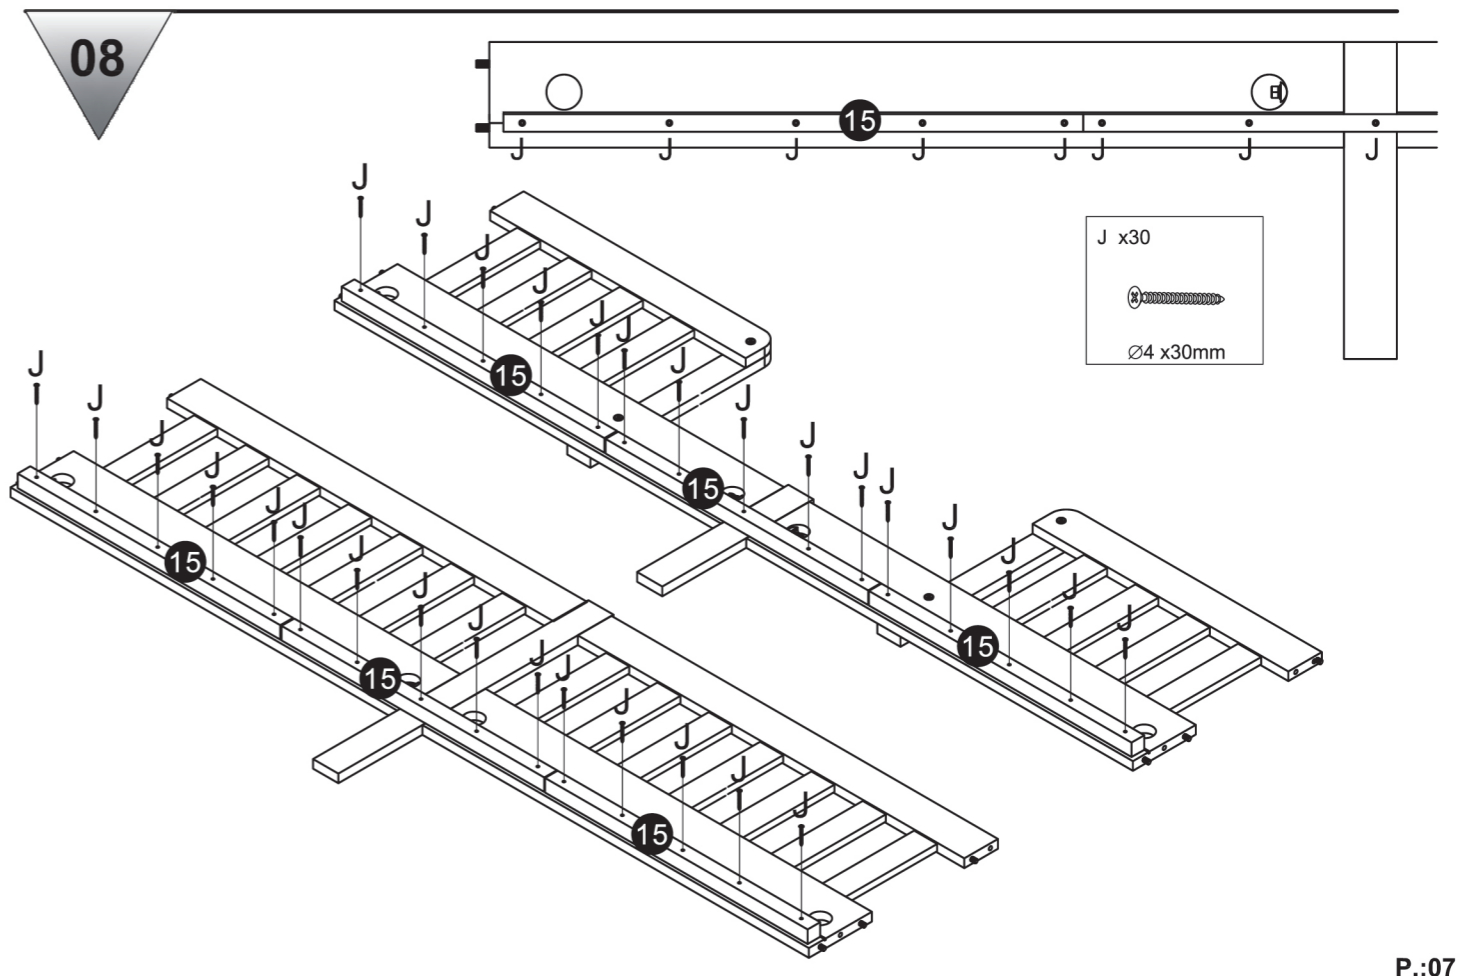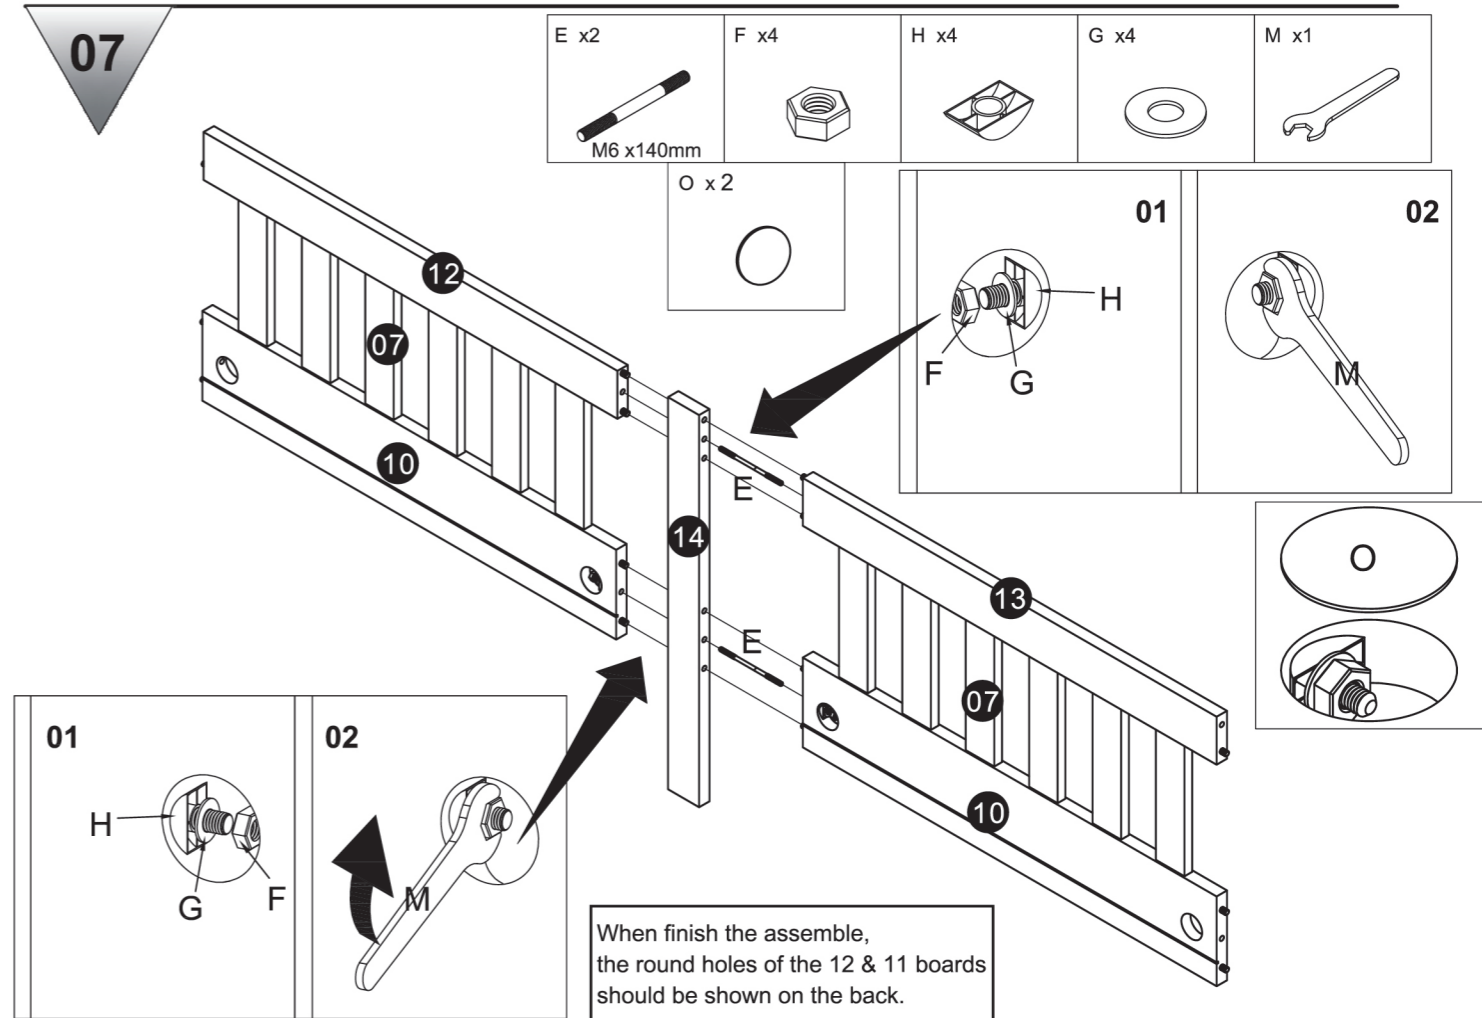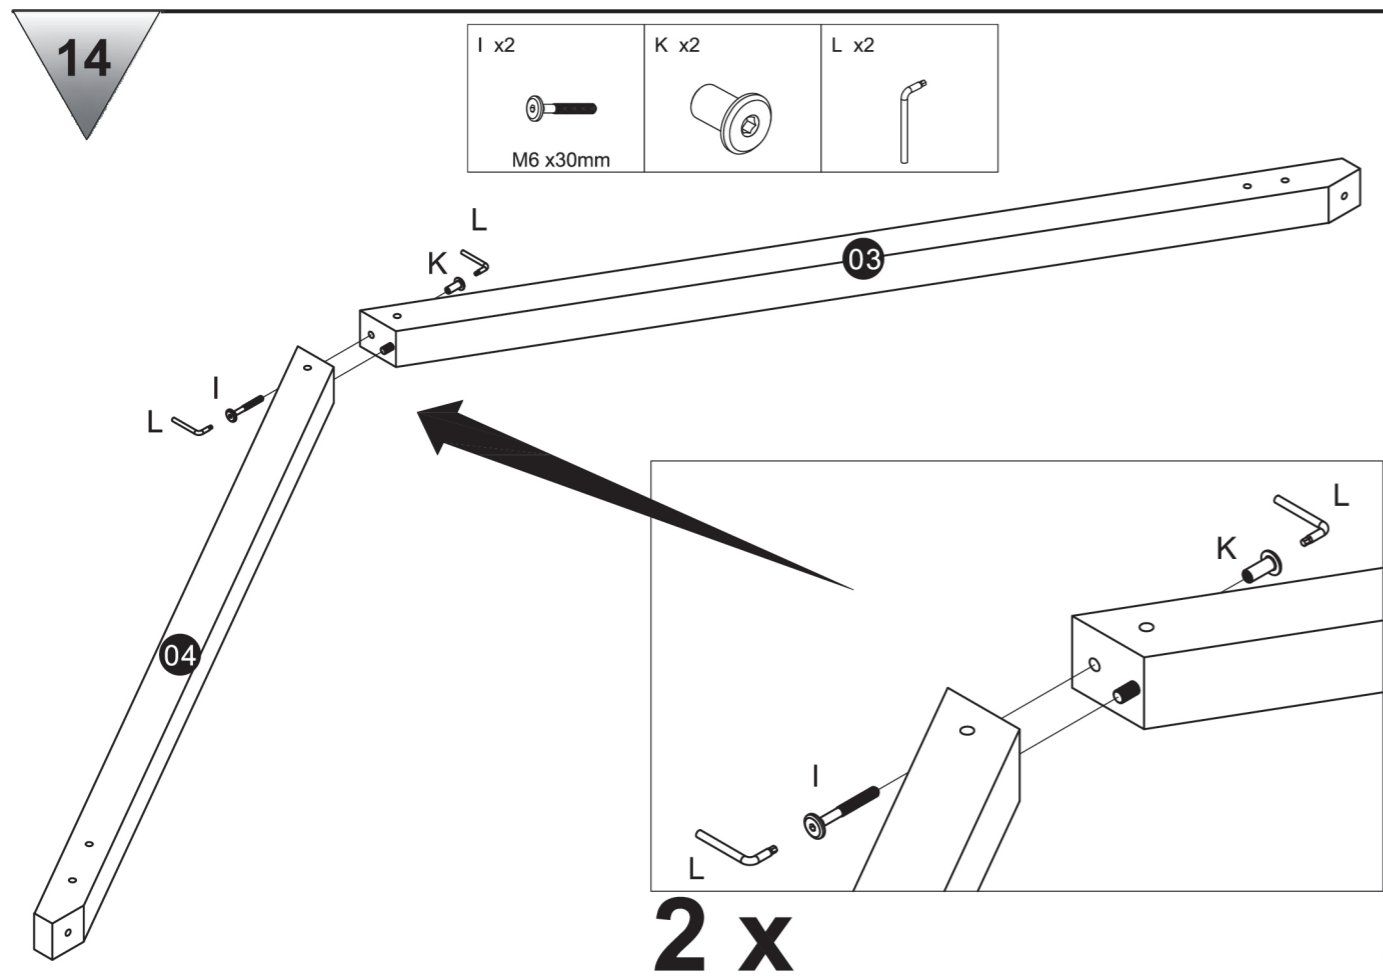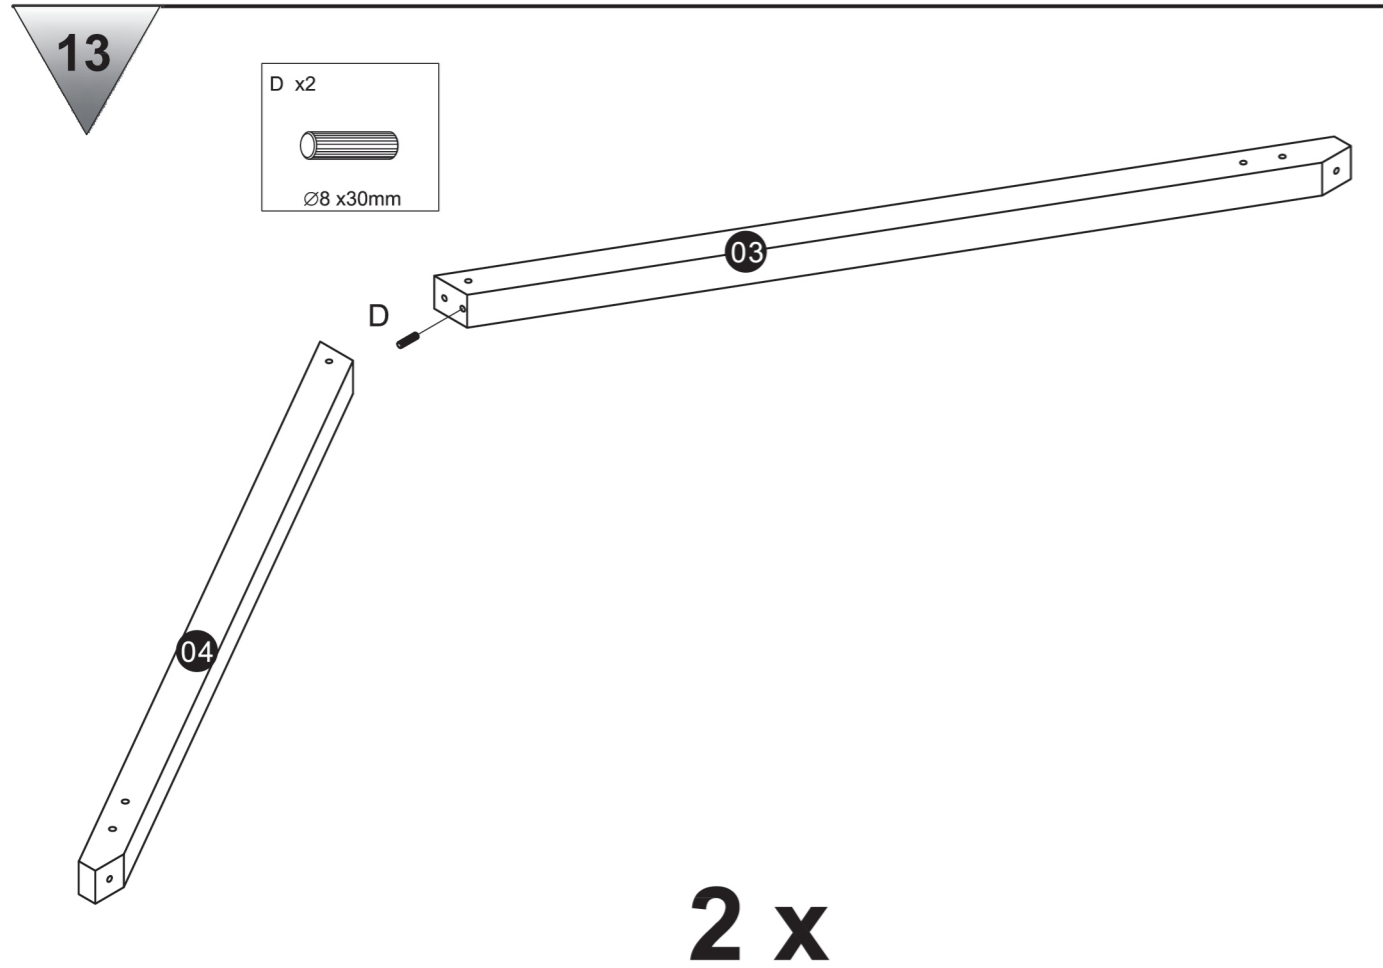


P.:11






09

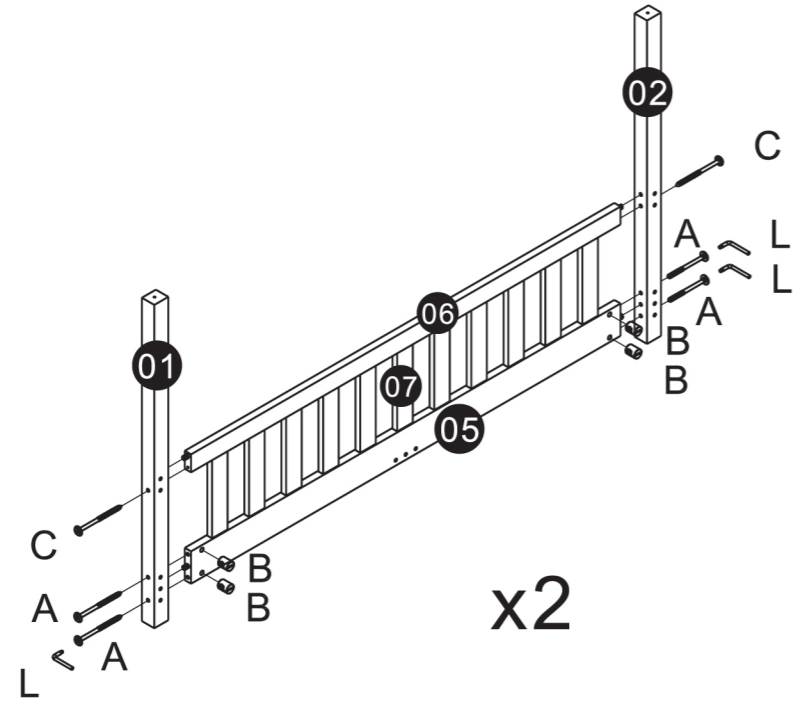L x1 	A x8 M6 x90mm 	B x8 	C x4 Ø6 x90mm 
---	---	---	---








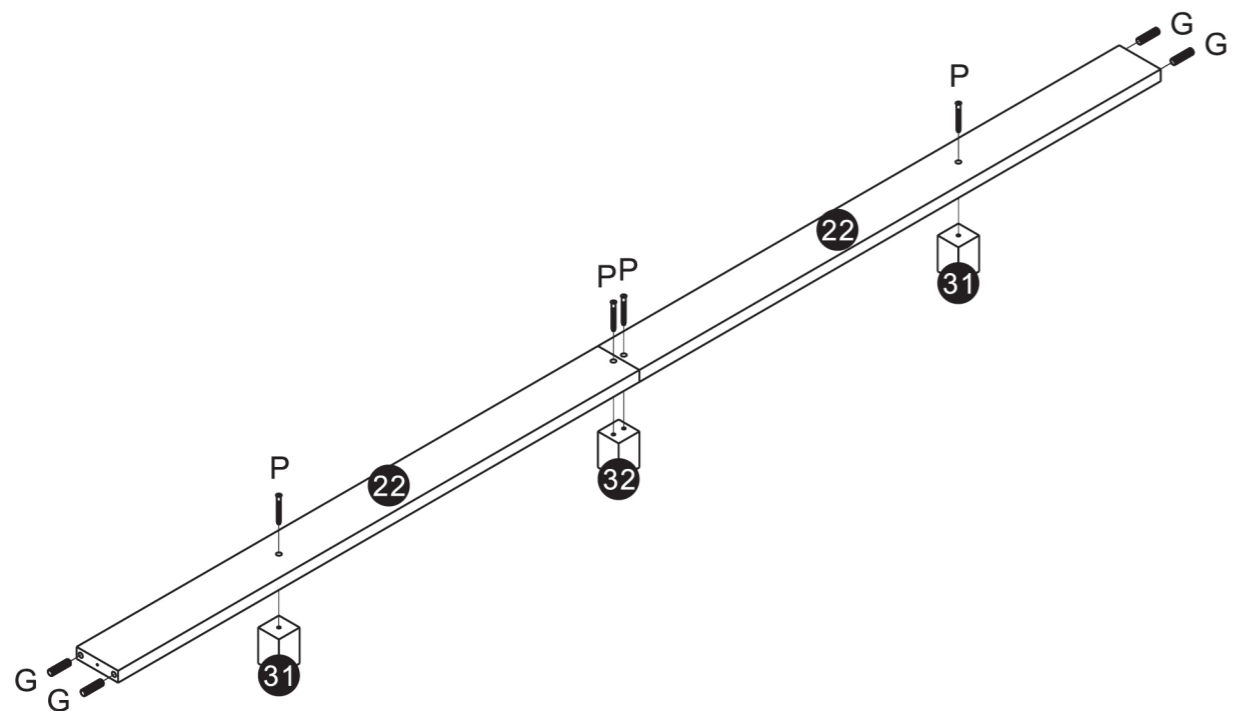


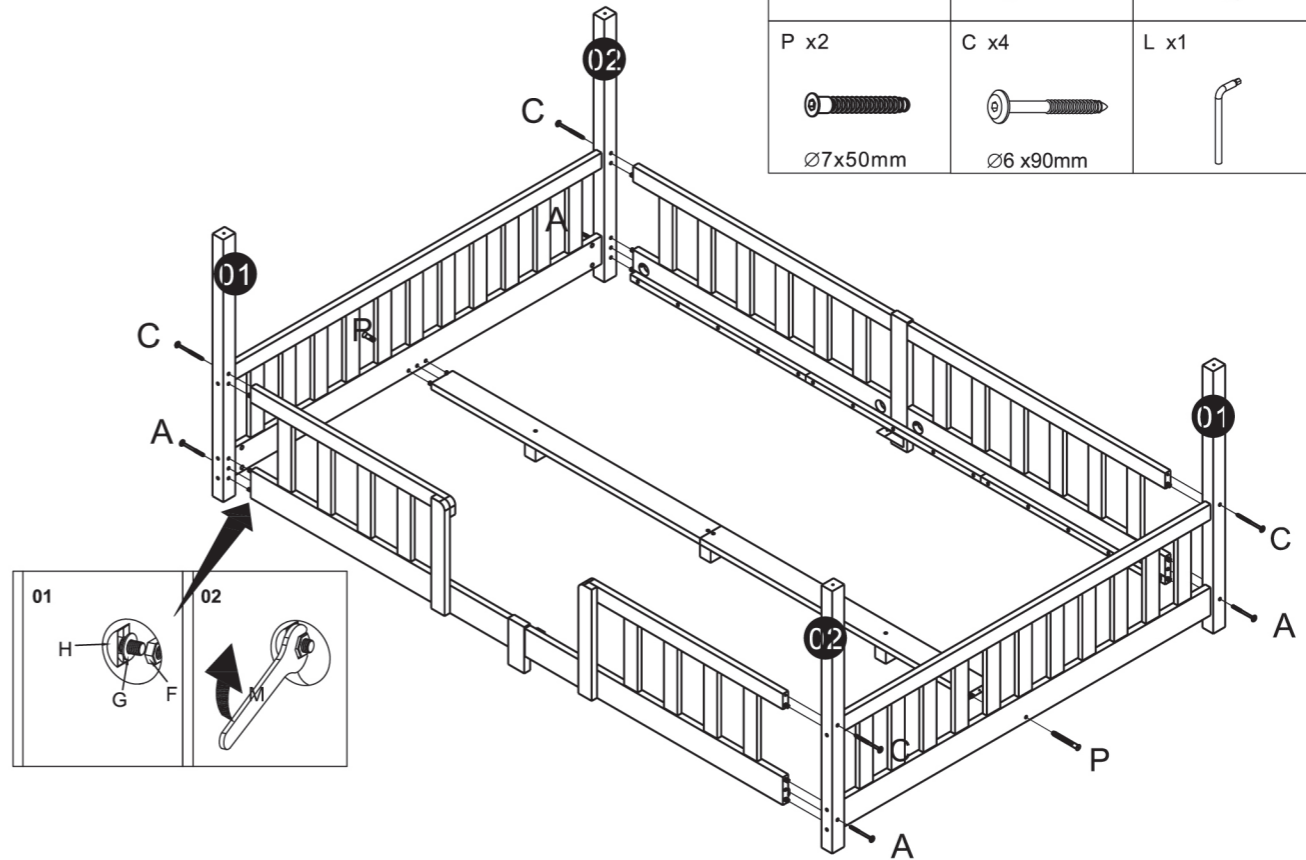
10

P x4 Ø7x50mm 	G x4 Ø8 x30mm 
--	---




11

G x4 	M x1 	F x4 	H x4 
P x2 Ø7x50mm 	C x4 Ø6 x90mm 	L x1 	A x4 M6 x90mm 



12

J x 26  Ø4 x30mm

